

# HE007.1 AHKC-EKBA Series Open Hall Current Sensor V1.0


### **1. Product Introduction**


It is insulative between the primary and secondary grade of AHKC-EKBA series current sensor which can be used

for measuring pulse current.

### 2. Technical Parameters and Overall Dimensions

		-
Parameters	Index	
Rated Input Current(DC)	0∼(200-1000)A	
Rated Output Voltage(DC)	4-20mA	
Accuracy Class	1.0	
Power Voltage	DC24V (allowable fluctuation±20%)	
Zero Offset Current	±0.05mA	Ī
Offset Current Drift	$\leq \pm 0.01$ mA/°C	
Linearity	≪0.2%FS	
Response Time	≤20us	102
Isolation Voltage	2.5kV/50Hz/1min	
Operating Temperature	-40°C~85°C	
Storage Temperature	-40°C~85°C	
Consumption	≤1W	1



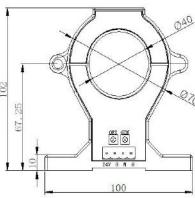




Unit: mm


## 3. Installation Method




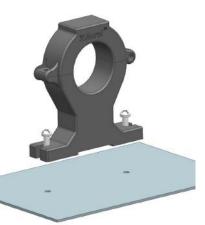

Base Plate Screw M5 (gasket) Installation

#### 4. Mode of Connection

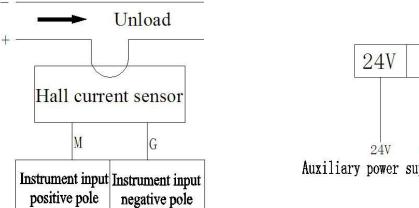

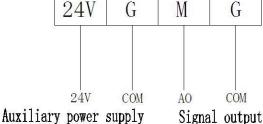

24V — power supply 24V

G — power ground

M —— signal output end positive pole

G —— signal output end negative pole

#### Note: The specific wiring is subject to the terminal no. of object shell.

#### 5. Precautions

1. When the Hall sensor is used, attention must be paid to the coupling between the primary side coil and assistant side coil in order to get better dynamic characteristics and sensitivity, single conductor that should cram the thread hole of Hall sensor module completely is proposed to use.

2. When the Hall sensor is used, the best measuring accuracy can be got under rated input current value. When the measured current is much less than the rated value, the primary side can use multi-turns if want to obtain the best accuracy, that is IpNp=rated ampere-turns. In addition, the temperature of the primary side feeder line cannot be more than 80°C.

3. When the Hall current sensor is working normally, the auxiliary power supply cannot be more than  $\pm 20\%$  of calibration value.

4. The Hall Current sensor is strictly prohibited to be fallen from high place  $(\geq 1m)$  during installation and use.

5. Zero and full scale regulator potentiometer can not be adjusted.

6. Auxiliary power supply is required to be deployed voluntarily.

7. Power positive and negative poles cannot be inversely connected.

#### 6. Order Sample

Sample 1 AHKC-EKBA Hall current sensor Auxiliary power supply: DC24V Input: DC(200~1000)A Output: DC4-20mA Accuracy: Grade 1