


## AWT100 wireless communication terminal

#### General

At present, wireless technology has gradually become an important direction for the development and application of networks in the industrial Internet in the future due to its advantages of easy deployment, low construction cost and wide applicable environment. AWT100 wireless communication terminal is a new wireless data acquisition device launched by Acrel. The uplink communication includes 2G, 4G, NB, LoRa, LoRaWAN and other communication modes. The downlink interface provides a standard RS485 data interface, which can easily connect power meters and RTUs, PLC, industrial computers and other equipment, only need to complete the initial configuration, you can complete the data acquisition of MODBUS equipment; at the same time AWT100 series wireless communication terminal uses a powerful micro-processing chip, with built-in watchdog technology, reliable performance stable.

### **Type Description**

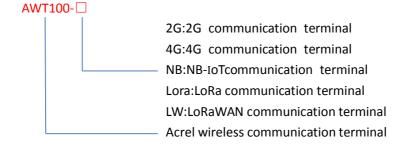

### **Function Description**

■ Support data acquisition of serial port MODBUS RTU protocol, and communicate with Acrel server through Acrel platform protocol.

Supports data acquisition for up to 30 MODBUS RTU devices.

■ Supports the acquisition of 5 register address fields for each MODBUS device, each register address range does not exceed 64.

■ Supports triggering alarms by preset alarm addresses and alarm values for each MODBUS address range. Each address domain alarm address currently has a maximum of five.

Support server MODBUS or LoRa transparent communication.

Support fixed IP and dynamic domain name resolution to connect to the data center.

Support transparent transmission protocol, universal mode (active rotation, timed reporting),

MQTT protocol, smart power wireless protocol, prepaid wireless protocol

Negotiation, custom development.

■ The functions of the AWT100-LW wireless communication terminal are still under development, and data can be uploaded to the server through LoRa communication in the

future.

Note: (1) The AWT100-2G/NB/4G wireless communication terminal can communicate with the Acrel server through the Encore platform protocol.


| Parameter<br>name    | AWT100-4G  | AWT100-NB   | AWT100-2G  | AWT100-LoRa<br>AWT100-LW |
|----------------------|--|---|--|--------------------------|
| Working<br>frequency | LTE-FDD B1 B3 B5 B8<br>LTE-TDD B34 B38 B39 B40<br>B41<br>CDMA B1 B5 B8<br>GSM 900/1800M  | H-FDD B1 B3 B8<br>B5 B20  | GSM 850<br>EGSM 900<br>DCS 1800<br>PCS 1900                                | LoRa 460 ~<br>510MHz     |
| Transmission<br>rate | LTE-FDD Downstream rate<br>up to 150Mbps<br>Uplink rate up to<br>50Mbps<br>LTE-TDD Downstream rate<br>up to 130Mbps<br>Uplink rate up to<br>35Mbps<br>CDMA Downstream rate<br>up to 3.1Mbps<br>Uplink rate up to<br>1.8Mbps<br>GSM Downstream rate<br>up to 107Kbps<br>Uplink rate up to<br>85.6Kbps | Downstream rate<br>up to 25.2Kbps<br>Uplink rate up to<br>15.62Kbps               | GPRS<br>Downstream rate<br>up to 85.6kbps<br>Uplink rate up to<br>85.6kbps | LoRa 62.5kbps            |
| Downstream           | RS485 communication  |   | 20   | LD                       |
| Uplink               | 4G communication   | NB-IoT<br>communication   | 2G<br>communication  | LoRa communication       |
| SIM card<br>voltage  | 3V, 1.8V   |   | /  |                          |
| Working<br>current   | Static power consumption: $\leq$   | Static power<br>consumption: ≤<br>0.5W,<br>transient power<br>consumption:≤<br>1W |  |                          |


# **Technical Parameter**

| Antenna<br>interface   | 50Ω/SMA(Female head)                               |
|------------------------|--|
| Serial port<br>type    | RS-485   |
| Baud rate              | 4800bps、9600bps、19200bps、38400bps(default 9600bps) |
| Working<br>Voltage     | DC24V or AC/DC220V1                                |
| Working<br>temperature | -10°C~55°C   |
| Storage<br>temperature | -20°C~70°C   |
| Humidity<br>range      | 0 to 95% non-condensing                            |

Note: ①AC/DC220V power supply requires an external AWT100 power module.

# **Dimension Drawings**

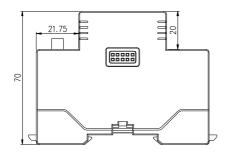

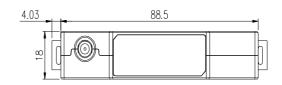


# Wiring and Installing

## Wiring sample of voltage and current

1.(1)AWT100-2G/NB/4G/LoRa/LW terminals and wiring



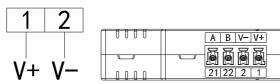





RS485 communication

#### (2) The network port function (the power and RS485 interface) definition

| 1       | 2 | 3   | 4  | 5  | 6 | 7     | 8    |  |
|---------|---|-----|----|----|---|-------|------|--|
| POWER   |   | GND |    | NC |   | 49E A | 40ED |  |
| (DC12V) |   | Gr  | ND | NC |   | 485A  | 485B |  |

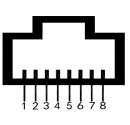

#### (3)AWT100-2G/NB/4G/LoRa/LW side interface definition

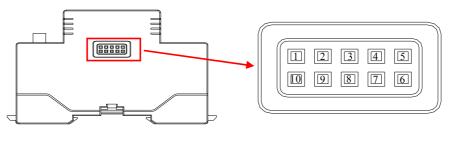

| 1  | 2   | 3   | 4    | 5 | 6  | 7    | 8   | 9   | 10 |
|----|-----|-----|------|---|----|------|-----|-----|----|
| NC | +5V | GND | 485A | Ν | IC | 485B | GND | +5V | NC |

Note:


The two interfaces of the network port and the terminal can only be used one by one and cannot be used at the same time.

#### 2.(1)Terminals and Wiring of AWT100 Power Module (Selected for AC220V Power Supply)



Auxiliary power supply (AC/DC 220V)

#### (2) AWT100 Power Module side interface definition

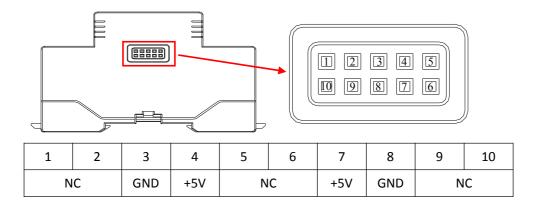

### Panel light definition

### 1.AWT100-2G/NB/4G wireless communication terminal panel light definition

| e link                               | 🛑 RSS I                   | 🔴 СОММ                         |
|--------------------------------------|---------------------------|--------------------------------|
| Green                                | Red                       | Orange                         |
| The green indicator light flashes    | The red indicator flashes | The orange indicator blinks to |
| for 2 seconds. The wireless          | for 3 seconds. The signal | show that there is network     |
| module is being initialized.         | strength is lower than    | data communication.            |
| The green indicator blinks for 1     | 20%.                      |                                |
| second and is connecting to the      |                           |                                |
| server.                              |                           |                                |
| If the green indicator is steady on, |                           |                                |
| the server is connected and the      |                           |                                |
| signal strength is greater than      |                           |                                |
| 20%.                                 |                           |                                |

#### 2.AWT100-LoRa/LW wireless communication terminal panel light definition

| e Run                        | 🛑 LoRa 🔶 COMM                     |                              |  |  |
|------------------------------|-----------------------------------|------------------------------|--|--|
| Green                        | Red                               | Orange                       |  |  |
| The green indicator light is | The red indicator flashes for 1   | The orange indicator flashes |  |  |
| steady on, indicating that   | second when there is a LoRa       | for 1 second when there is   |  |  |
| the meter is working         | signal receiving and transmitting | 485 signal receiving and     |  |  |
| properly.                    | data.                             | sending data.                |  |  |

#### 3.Panel Light Definition for AWT100 Power Module

RUN : If the green indicator light is steady on, the power module is working properly. If the indicator is off, the module is not powered or faulty.